



<b>PMP Heating Maintenance Chart (Boilers)</b>	<b>Bronze</b>	<b>Silver</b>	<b>Gold</b>	<b>Platinum</b>
Inspect and test gas piping	✓	✓	✓	✓
Inspect and test ignition system	✓	✓	✓	✓
Inspect exhaust system	✓	✓	✓	✓
Inspect heat exchanger	✓	✓	✓	✓
Inspect and test inducer	✓	✓	✓	✓
Test thermostat(s)	✓	✓	✓	✓
Test zone controls	✓	✓	✓	✓
Inspect pump(s)	✓	✓	✓	✓
Inspect and test roll out switch	✓	✓	✓	✓
Inspect and test spill switch	✓	✓	✓	✓
Inspect and test low water cut off	✓	✓	✓	✓
Test limit control	✓	✓	✓	✓
Inspect and test water feeder	✓	✓	✓	✓
Check boiler pressure	✓	✓	✓	✓
Inspect all radiators and/or baseboards	✓	✓	✓	✓
Clean equipment jacket	✓	✓	✓	✓
Combustion analysis	✓	✓	✓	✓
Adjust limit control		✓	✓	✓
Adjust pilot		✓	✓	✓
Inspect burner chamber		✓	✓	✓
Vacuum burner chamber		✓	✓	✓
Clean burners			✓	✓
Clean thermocouple			✓	✓
Clean pilot assembly			✓	✓
Clean ignitor			✓	✓
Adjust burners			✓	✓
Adjust boiler pressure control			✓	✓
Inspect and tighten all electrical connections				✓
Clean sight glass				✓
Clean pigtail				✓
Clean base of chimney (if accessible)				✓
Clean flame sensor				✓